




▶ Audi A3 Sportback e-tron

2014 - 2020

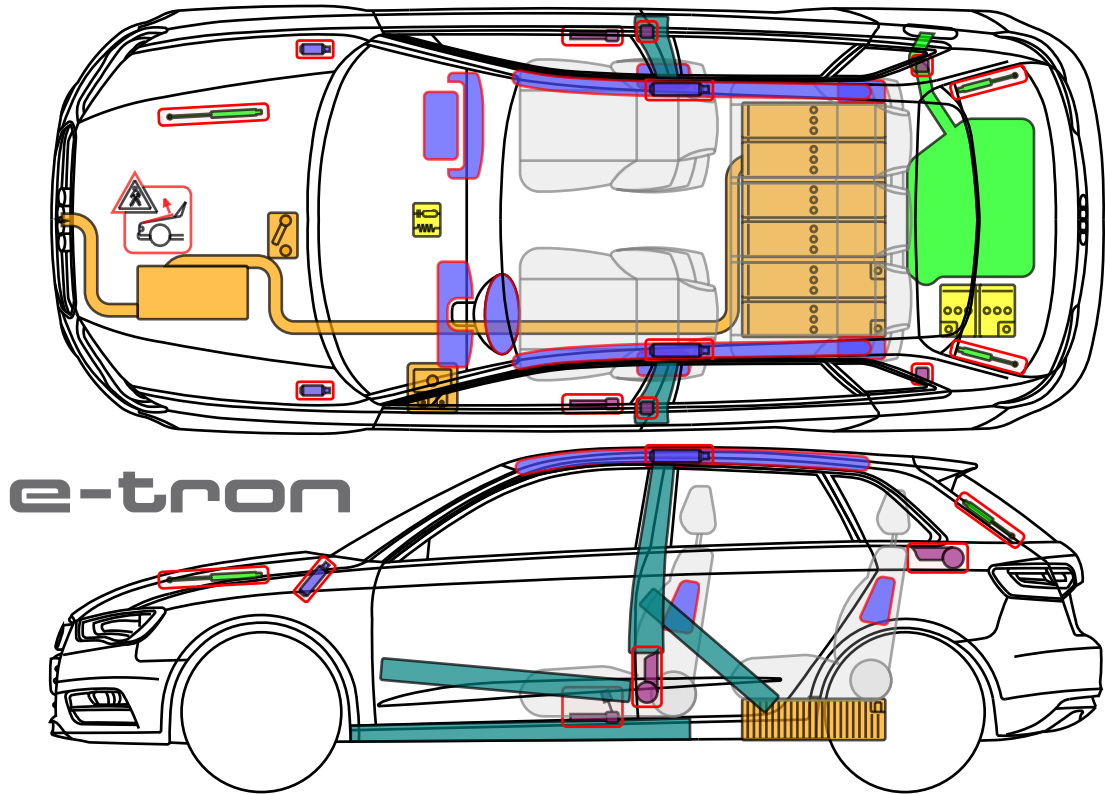

e-tron

Legend

|  |                       |  |                    |  |                                |  |                                   |
|--|-----------------------|--|--------------------|--|--------------------------------|--|-----------------------------------|
|  | Airbag                |  | Automatic roll bar |  | Fuel tank                      |  | High voltage emergency disconnect |
|  | Stored gas inflator   |  | Cylinder           |  | High voltage battery           |  | Pedestrian protection system      |
|  | Seatbelt pretensioner |  | SRS control unit   |  | High voltage -cable/-component |  |                                   |
|  | Reinforcement         |  | 12 V Battery       |  | Fusebox                        |  |                                   |





# ▶ Audi A3 Sportback e-tron

2014 - 2020

## Characteristic features


The A3 e-tron can be identified by the e-tron logo, the orange cables (e. g. in engine compartment) and the charging socket.



# e-tron

## Vehicle immobilization

1. Gear lever in position park „P“
2. Apply parking brake

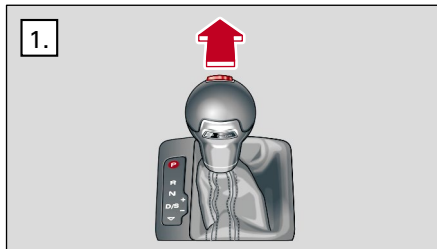

## Switch off ignition

Press START-ENGINE-STOP button **without** depressing brake pedal.



**⚠ Warning:** When pressing the START-ENGINE-STOP button and depressing the brake pedal at the same time, the engine will start!









# ▶ Audi A3 Sportback e-tron

2014 - 2020

## Deactivation of High Voltage System


### Alternative 1 – Engine compartment accessible

1. Localize emergency disconnect
2. Open safety disconnect

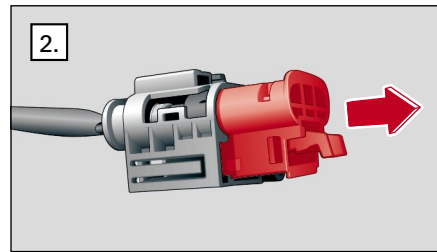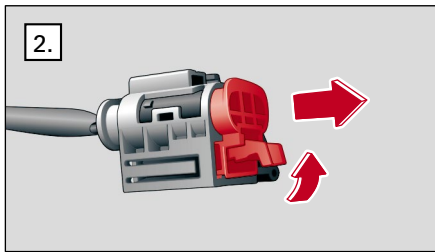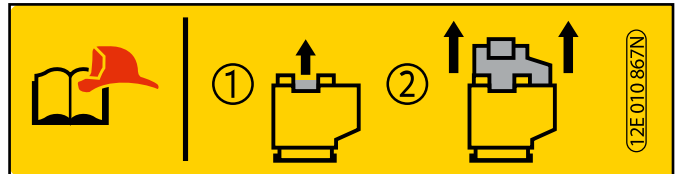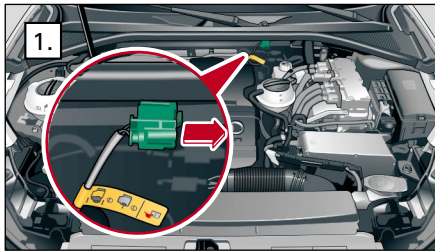


### Alternative 2 – Emergency disconnect fuse in passenger compartment


1. Identify emergency fuse
2. Disconnect emergency fuse

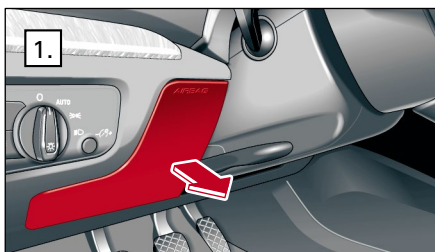

Fuse box – **left-hand drive** (steering wheel left)

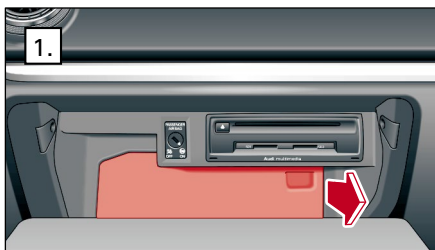

Fuse box in glove compartment **right-hand drive** (steering wheel right)

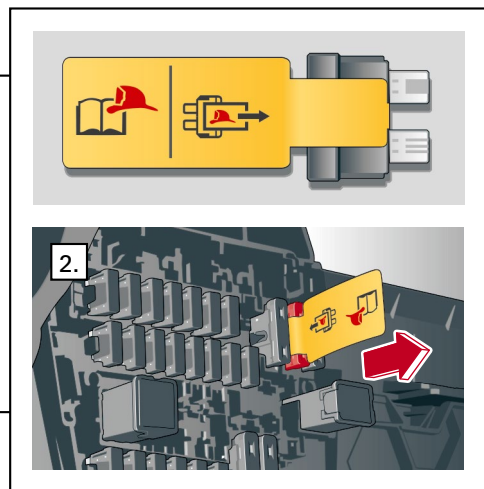





## ▶ Audi A3 Sportback e-tron

2014 - 2020

### Disconnect 12 V battery

The 12 V battery is located in the luggage compartment below the luggage compartment floor. The cables of both terminals are fed out directly through the plastic cover.

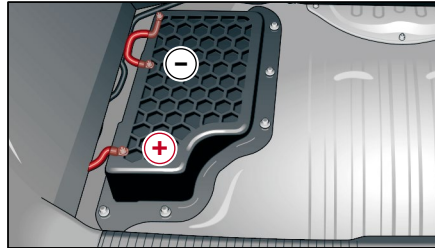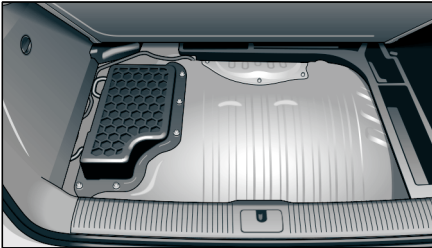

### Disconnect charging cable

Vehicle connected to charging station:

1. Unlock vehicle via remote control or central locking switch
2. Disconnect charging cable

If required, follow further steps of this rescue data sheet

